

FSDC Combination Trigger Lock Instruction Sheet

(Models TL3325BCB, TL3180RCB and TL3845RCB)

WARNING!

NEVER INSTALL ON A LOADED FIREARM

Failure to follow any of these instructions can result in death or serious injury to you or those around you. Putting a trigger lock on a loaded firearm OR loading a firearm that has a trigger lock on may result in serious injury or death!

- Prior to installing the Trigger Lock, read the Owner's Manual supplied with your firearm before loading, handling, and operating.
- Store firearms and ammunition separately and securely. Keep firearms and ammunition out of the reach of children.
- This lock may be cut or defeated by a determined individual and may not prevent intentional misuse of a firearm.

 
 
CALIFORNIA PROPOSITION

65 WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


NOTICE: Firearm Safety Devices Corporation does not guarantee that this product will fit all firearms. It is designed to block access to the trigger of most firearms when properly installed. Some Lever Action Rifles cannot be blocked effectively with this product. Firearm Safety Devices Corporation is not liable for incidental or consequential damages.

INSTALLATION INSTRUCTIONS


1. The lock is set to open at "0-0-0" from the factory.
2. Change the factory set combination (recommended) by following these steps:
 - A. Place the lock in the open position by turning the face of the lock 90 degrees (the half that displays the combination).
 - B. Locate the set pin on the side of the lock.
 - C. Using a ballpoint pen, push in the set pin and hold.
 - D. Turn the dials one at a time to set your own combination.
 - E. Release the set pin after your code is set.
 - F. Turn the face back clockwise to its original closed position.
3. Put the firearm's safety mechanism in the "ON" ("SAFE") position. Keep the firearm pointed in a safe direction while handling the firearm and when installing or removing the Trigger Lock.
4. Unload all ammunition from the firearm as described in the firearm's Owner's Manual.
5. Visually and physically inspect the chamber, receiver, and magazine to ensure that the firearm is completely unloaded.
6. To open the Trigger Lock, turn the combination dials one at a time until the combination you set can be read. Rotate the face 90 degrees to the open position and then pull the two Trigger Lock halves apart.
7. While pointing the firearm in a safe direction, position the left half of the Trigger Lock on left side of the firearm trigger guard. The tab on the outside rear of the Trigger Lock half **must** be on the outside of the trigger guard. (See Picture #1)
8. Insert the right half of the Trigger Lock (the half with Ratchet Post and combination dials) into the right side of the trigger guard, matching up with the left half of the Trigger Lock (See Picture #2). Press both halves of the Trigger Lock (left and right) together as tight as possible (See Picture #3). To lock, turn face back to its closed position, rotate the dials to reveal a combination that is **DIFFERENT** from the combination you set. (See Picture #4)
9. Inspect the Trigger Lock for fit. Pull on Trigger Lock halves to make sure they are tight. If the Trigger Lock is loose, press the two halves together until tight with little-to-no movement.
10. To Unlock: Turn the combination dials one at a time until the combination you set can be read. Rotate the face 90 degrees and then pull the two Trigger Lock halves apart and remove from the firearm.

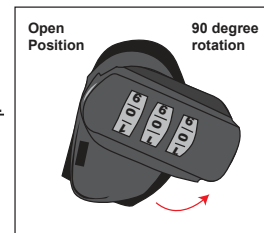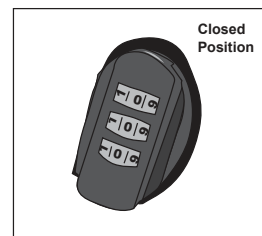


Picture #1

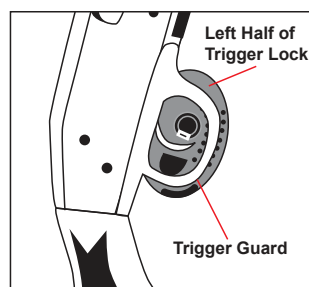 

Picture #2

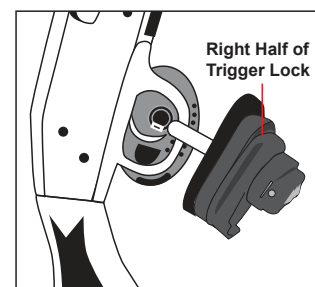 

Picture #3

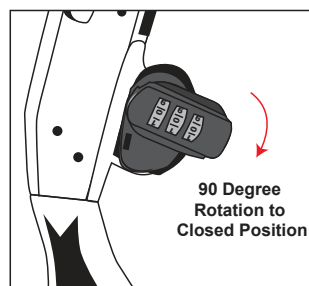 

Picture #4

