

Regal™ Model 2007J Trigger Gun Lock

This lock is a California-approved firearms safety device that meets the requirements of California Penal Code Section 23655 and the regulations issued thereunder.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov. Use of this product, including its use after discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead. Have adequate ventilation at all times and wash hands thoroughly after handling this product.

⚠ WARNING – USE OF LOCKING DEVICES

- Always keep your firearm pointed in a safe direction, including when installing or removing your locking device.
- Always verify that your firearm is completely **unloaded** before installing your locking device.
- Store firearms, ammunition and keys separately and securely, away from children and careless adults; do not store your firearm with the keys in the locking device.
- Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.
- While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. This device is intended to discourage unauthorized access to the firearm, particularly by children. Remember that any mechanical device can be bypassed with enough time, knowledge, determination, and equipment.

LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY

Installation Instructions

1. Engage the firearm's safety mechanism in the "ON" or "SAFE" position. See Firearm's Owner's Manual.
2. Unload all ammunition from the firearm in a safe manner. See Firearm's Owner's Manual.
3. Visually inspect chamber and magazine to confirm that the firearm is completely unloaded.
4. Leave action open for easy chamber inspection.
5. To open the Trigger Lock, insert the key into the lock plug and turn clockwise.
6. Pull the two sides of the lock apart.
7. Once the Trigger Lock is open, turn the key counter clockwise and remove.
8. Insert the half of the Trigger Lock with the Ratchet Post and Fixed Pins through the right side of the trigger guard. Make sure the Trigger Block pin is behind the trigger. **Note:** This may not be possible with all firearms. See Photo 1.
9. Position the open holes on the other half of the Trigger Lock so that it mates with the Ratchet Post and Fixed Pins. See Photo 2.
10. Press both sides of the Trigger Lock (left and right) together as tightly as possible. See Photo 3
11. Inspect the Trigger Lock for a tight and secure fit. Pull on the Trigger Lock to make sure it is locked. If there is excessive movement remove and repeat Steps 8 through 11.
12. Store the key in a separate and secure location away from the firearm.
13. **To Unlock:** Insert the key into the Trigger Lock and turn clockwise. Pull the two sides of the lock apart and remove from the firearm.



Photo 1



Photo 2



Photo 3

Notice: Regal Industrial Sales, Inc. does not guarantee that this product will fit all firearms. Regal Industrial Sales is not liable for incidental or consequential damages.

RIS010818

Manufactured by: Regal Industrial Sales, Inc. PO Box 355, Victor, NY 14564
888-908-6411 or 585-398-1290