

# Regal™ Model RTL06 Trigger Gun Lock

Designed to fit Remington firearm models: 1100, 1187, 870, 552, 572, 7400, 7600, and others.

**⚠ WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). Use of this product including its use after discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead. Have adequate ventilation at all times and wash hands thoroughly after handling this product.

This lock is a California-approved firearms safety device that meets the requirements of California Penal Code Section 23655 and the regulations issued thereunder.

## **⚠ WARNING – USE OF LOCKING DEVICES**

- Always keep your firearm pointed in a safe direction, including when installing or removing your locking device.
- Always verify that your firearm is completely **unloaded** before installing your locking device.
- Store firearms, ammunition and keys separately and securely, away from children and careless adults; do not store your firearm with the keys in the locking device.
- Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.
- While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. This device is intended to discourage unauthorized access to the firearm, particularly by children. Remember that any mechanical device can be bypassed with enough time, knowledge, determination, and equipment.

**LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY**

## Installation Instructions

1. Engage the firearm's safety mechanism in the "ON" or "SAFE" position. See Firearm's Owner's Manual.
2. Unload all ammunition from the firearm in a safe manner. See Firearm's Owner's Manual.
3. Visually inspect chamber and magazine to confirm that the firearm is completely unloaded.
4. Leave action open for easy chamber inspection.
5. To open the Trigger Lock, insert the key into the lock plug and turn counter clockwise to "UNLOCK".
6. Pull the two sides of the lock a part.
7. Once the Trigger Lock is open make sure the key is kept in the "UNLOCK" position.
8. Insert the left side of the Trigger Lock (the side with lock plug and pins) through the shooter's left side of the trigger guard making sure the trigger block is behind the trigger. (See Photos 1 and 2).
9. Insert the right side of the Trigger Lock (the side with slot) into the shooter's right side of the trigger guard, matching the pins on the left side with holes on the right side and slot with back of the lock. (See Photo 3).
10. Press both sides of the Trigger Lock (left and right) together and hold together.
11. Inspect the Trigger Lock for a tight and secure fit. Turn the key clockwise to "LOCK" (See Photo 4). Pull on Trigger Lock halves to make sure they are secure.
12. Store the key in a separate and secure location away from the firearm.
13. **To Unlock:** Insert the key into the Trigger Lock key plug and turn counter clockwise to "UNLOCK". Pull the two sides of the lock apart and remove from the firearm.



Photo 1



Photo 2



Photo 3



Photo 4

Notice: Regal Industrial Sales, Inc. does not guarantee that this product will fit all firearms. Regal Industrial Sales is not liable for incidental or consequential damages.